

DIAGRAM 1.0


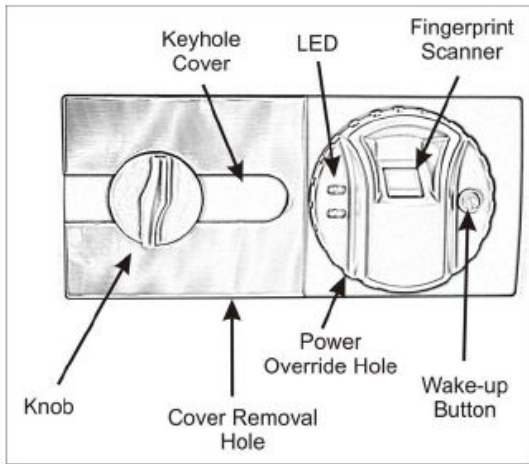


DIAGRAM 2.0

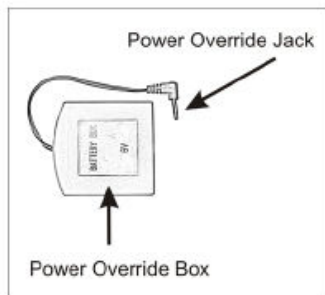

2

3

WELCOME:

STEP 1 – OPENING THE SAFE:

1. PRESS THE WAKE-UP BUTTON.
2. PLACE YOUR FINGER ON THE FINGERPRINT SCANNER UNTIL THE LED TURNS GREEN FOLLOWED BY A LONG BEEP.
3. REMOVE YOUR FINGER FROM THE FINGERPRINT SCANNER.
4. TURN THE KNOB CLOCKWISE (RIGHT) AND OPEN THE DOOR.

NOTE: SAFE WILL OPEN WITH ANY FINGER IF NO FINGERPRINT IS ENROLLED.

NOW YOU ARE READY TO ENROLL YOUR OWN FINGERPRINT.

ENROLLING:

STEP 2 – ENROLLING THE FIRST FINGERPRINT

1. OPEN THE SAFE BY FOLLOWING STEP 1.
2. PRESS THE SETUP BUTTON (LOCATED IN BACK OF DOOR), THE FINGERPRINT SCANNER WILL FLASH RED.
3. **Now:** (WHILE SCANNER LIGHT IS FLASHING RED)
 - a. PLACE YOUR FINGER ON THE FINGERPRINT SCANNER, WAIT FOR ONE BEEP AND LED TURNS GREEN.
 - b. KEEP YOUR FINGER ON THE FINGERPRINT SCANNER, WAIT FOR TWO BEEPS AND THE LED FLASHES GREEN TWICE.
 - c. REMOVE YOUR FINGER FROM THE FINGERPRINT SCANNER.
 - d. YOUR FINGER IS NOW ENROLLED.

STEP 3 – ENROLLING ADDITIONAL FINGERPRINTS

1. OPEN THE SAFE BY FOLLOWING STEP 1.
2. PRESS THE SETUP BUTTON, THE FINGERPRINT SCANNER WILL FLASH RED.
3. **Now:** (WHILE SCANNER LIGHT IS FLASHING RED)
 - a. PLACE YOUR FINGER ON THE FINGERPRINT SCANNER, WAIT FOR ONE BEEP AND LED TURNS GREEN.
 - b. REMOVE YOUR FINGER FROM THE FINGERPRINT SCANNER FOR TWO SECONDS.
 - c. PLACE YOUR FINGER ON THE FINGERPRINT SCANNER FOR THE SECOND TIME, WAIT FOR TWO BEEPS AND THE LED FLASHES GREEN TWICE.
 - d. REMOVE YOUR FINGER FROM THE FINGERPRINT SCANNER.
 - e. THE ADDITIONAL FINGERPRINT IS ENROLLED.

NOTE: TO KEEP ENROLLING MORE FINGERPRINTS, REPEAT STEP 3.

DELETING:

STEP 4 – DELETING FINGERPRINTS:

1. PLEASE FOLLOW INITIALIZATION PROCESS.

NOTE: YOU CANNOT DELETE INDIVIDUAL USERS. YOU MUST DELETE ALL USERS.

INITIALIZING:

RESTORING FACTORY SETTING:

1. OPEN THE SAFE BY FOLLOWING STEP 1.
2. OPEN BATTERY COVER. (BACK OF THE DOOR)
3. REMOVE ONE BATTERY FROM THE BATTERY TRAY.
4. PRESS AND HOLD THE WAKE-UP BUTTON FOR THREE SECONDS, THEN RELEASE.
5. PRESS AND HOLD THE SETUP BUTTON. WHILE HOLDING THE SETUP BUTTON INSERT THE BATTERY BACK TO THE BATTERY TRAY.
6. KEEP HOLDING THE SETUP BUTTON UNTIL THE LED FLASHES GREEN TWICE AND 2 BEEPS WILL SOUND.
7. RELEASE THE SETUP BUTTON AND THE SAFE IS INITIALIZED!

EMERGENCY OPENING:

KEY OVERRIDE:

1. INSERT THE POWER OVERRIDE JACK INTO THE COVER REMOVAL HOLE AND PUSH UPWARDS.
2. GENTLY REMOVE THE KEYHOLE COVER AND INSERT THE TUBULAR KEY.
3. TURN THE KEY CLOCKWISE (RIGHT) AND THEN TURN THE KNOB TO OPEN THE SAFE.

POWER OVERRIDE:

1. INSTALL 4 NEW BATTERIES IN THE POWER OVERRIDE BOX AND PLUG THE POWER OVERRIDE JACK INTO THE POWER OVERRIDE HOLE.
2. OPEN THE SAFE BY FOLLOWING STEP 1.
3. OPEN BATTERY COVER AND INSTALL 4 NEW BATTERIES.
4. CLOSE BATTERY COVER, THE SAFE GOES BACK TO NORMAL OPERATION MODE.

NOTE: THE SAFE KEEPS THE FINGERPRINTS IN MEMORY UP TO 6 MONTHS WITHOUT POWER.



USER'S MANUAL FOR FINGERPRINT SAFE

For Models:

BioAxxis® S800

BioAxxis® S1300

BioAxxis® S2500