



Introducing
The **USB Fingerprint Lock**


“A commercial-grade,
access control system
- on your door -
at half the price.”

Commercial-Grade Access Control



- PC Management Upgrade (PCMU)
 - Includes: Access Control/ Audit Trail software, USB Fingerprint Scanner and 1GB Flash Drive
- How It Works
 - Register all fingerprints (and/or PIN codes) of all users at one centralized PC with the fingerprint scanner
 - Set access control rights at the PC of each individual user to each individual lock
 - When finished, upload those access control rights to the flash drive
 - Bring the flash drive to the lock and program the lock from the flash drive
 - Plus AT records can still be offloaded from the lock to the flash drive

PCMU Screen Shots - Fingerprint Sensitivity

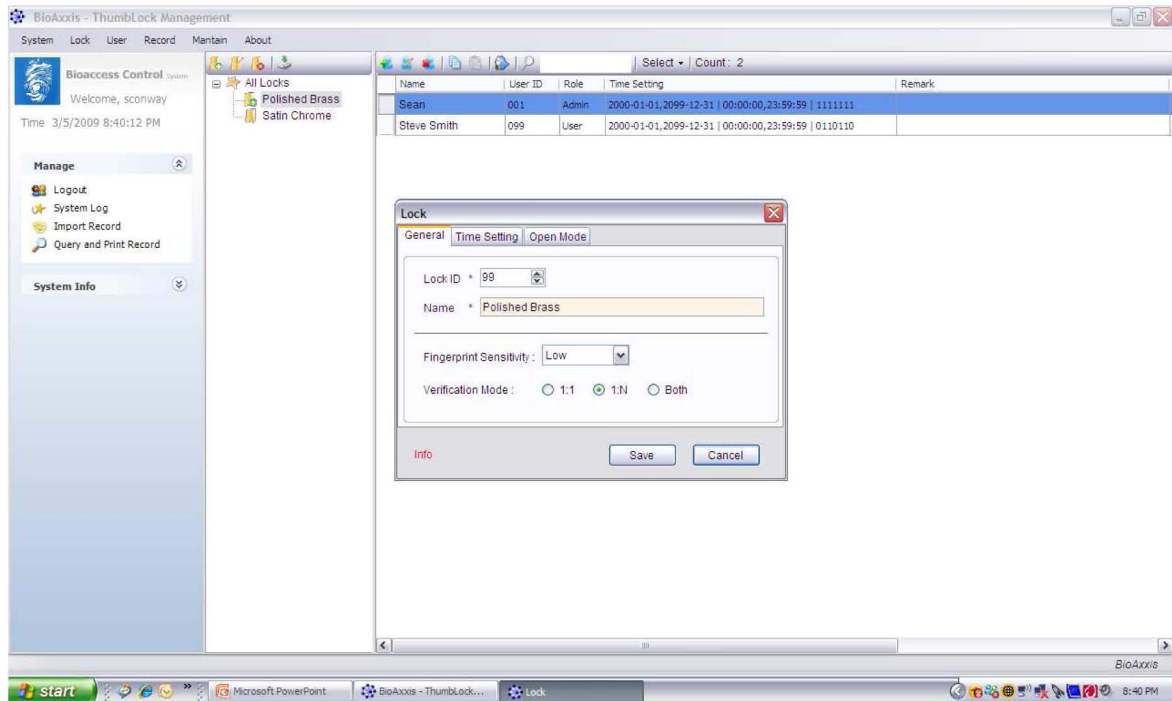


The screenshot displays the BioAxixs - ThumbLock Management application interface. The main window shows a list of locks, with 'Polished Brass' selected. A 'Lock' configuration dialog box is open, showing the following settings:

- Lock ID: 99
- Name: Polished Brass
- Fingerprint Sensitivity: Low
- Verification Mode: 1:1 (selected), 1:N, Both

The dialog box also includes 'Save' and 'Cancel' buttons, and an 'Info' link. The background window shows a table of users and locks, and a sidebar with navigation options like 'Logout', 'System Log', and 'Import Record'.

Name	User ID	Role	Time Setting	Remark
Sean	001	Admin	2000-01-01,2099-12-31 00:00:00,23:59:59 11111111	
Steve Smith	099	User	2000-01-01,2099-12-31 00:00:00,23:59:59 0110110	

PCMU Screen Shots - Time Settings

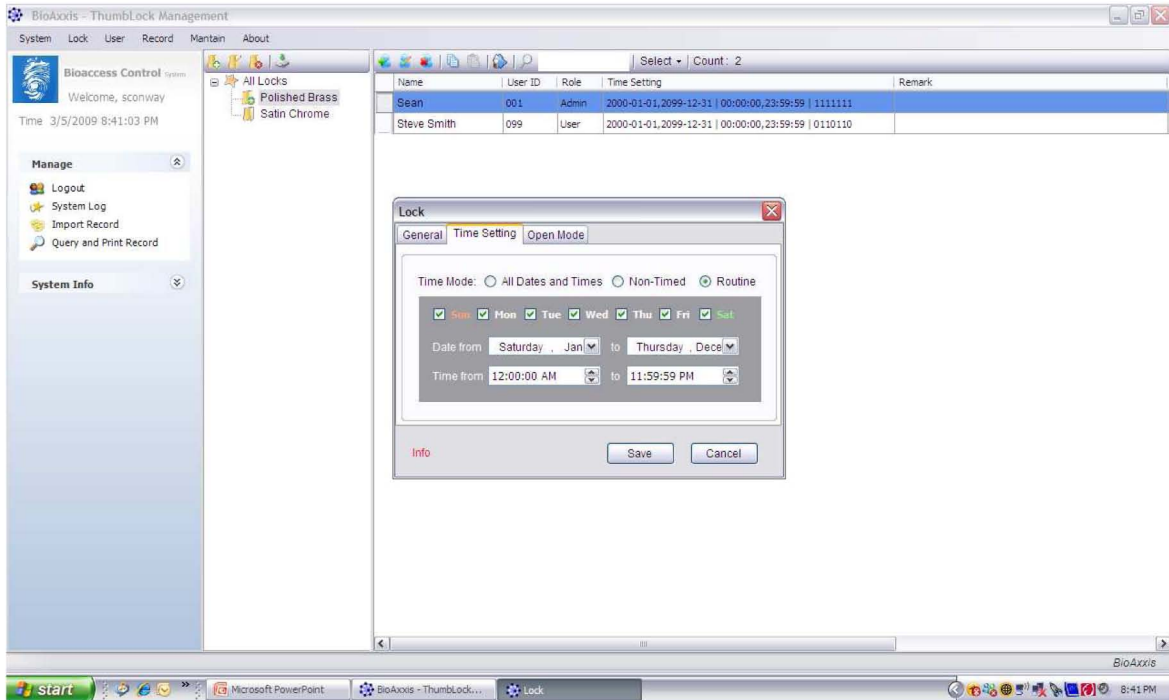


The screenshot displays the BioAccess Control software interface. The main window is titled "BioAccess Control" and shows a list of locks under "All Locks", including "Polished Brass" and "Satin Chrome". A table lists users and their time settings:

Name	User ID	Role	Time Setting	Remark
Sean	001	Admin	2000-01-01,2099-12-31 00:00:00,23:59:59 11111111	
Steve Smith	099	User	2000-01-01,2099-12-31 00:00:00,23:59:59 0110110	

A "Lock" dialog box is open, showing the "Time Setting" tab. The "Time Mode" is set to "Routine". The days of the week are all checked: Sun, Mon, Tue, Wed, Thu, Fri, Sat. The "Date from" is set to "Saturday, Jan" and "to" is "Thursday, Dec". The "Time from" is "12:00:00 AM" and "to" is "11:59:59 PM". The dialog box has "Save" and "Cancel" buttons.

PCMU Screen Shots - User FP Enroll

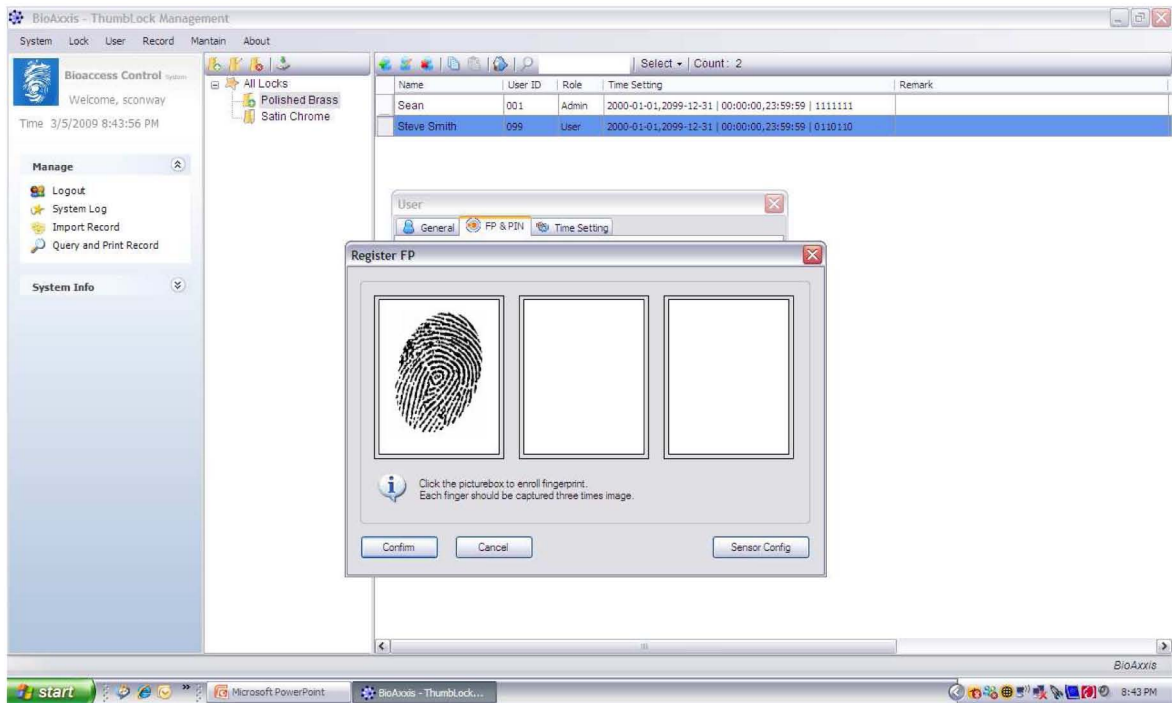

The screenshot displays the BioAxxis - ThumbLock Management application. The main window shows a list of users with the following data:

Name	User ID	Role	Time Setting	Remark
Sean	001	Admin	2000-01-01,2099-12-31 00:00:00,23:59:59 11111111	
Steve Smith	099	User	2000-01-01,2099-12-31 00:00:00,23:59:59 0110110	

A "Register FP" dialog box is open, showing a fingerprint image in the first of three capture boxes. Below the boxes, an information icon and text state: "Click the picturebox to enroll fingerprint. Each finger should be captured three times image." The dialog includes "Confirm", "Cancel", and "Sensor Config" buttons.

The application interface includes a sidebar with "Bioaccess Control" and "Manage" options, and a taskbar at the bottom showing "Microsoft PowerPoint" and "BioAxxis - ThumbLock...".



All The Features - Half The Price

- ThumbLock™ MSRP \$ 999.00
- Add ATU MSRP \$ 99.00
or
- Add PCMU MSRP \$ 299.00
- Compare our MSRP to the discounted price of an installed Access Control System...
 - Non-biometric Hardware\$ 1,000+
 - Hardware accessories.....\$ 1,000+
 - strikes, software, add-ons, etc
 - Electrical installations.....\$ 500+
 - Network installations.....\$ 500+
- **Tell Your Customers – “Enjoy the Savings!”**



5 Methods Of Access

1. PIN-code Access:

Up to 1,000 pin code users
(PIN codes can be any length)

2. Key Access:

Standard 6-pin rim cylinder
Schlage SC-4 keyway
Easily re-keyed or master keyed

3. Biometric Access:

Up to 1,000 fingerprint users (1:N)

4. High-Security Access:

Enhances security
having Users enter
either User ID & FP
or User ID & PIN
code. This is called
1:1 matching.

5. Emergency:

Hidden 9V battery port
(in case batteries run out)



5 Methods Of Access (cont'd)



- One-of-a Kind Technology
 - Customizable
 - Administrator can set-up each User to be...
 - PIN-code-only
 - Fingerprint-only (1:N)
 - User ID/FP (or PIN) together (1:1)
 - There is no lock on the world market that allows this much flexibility




Commercial-Grade Security

- Heavy Duty Electromechanical components
 - Rated to over 1.2M cycles
- ANSI Grade 2 Latch, UL fired-rated
- Commercial-grade keyway
- Free-wheeling clutch ensures longer handle life
- Coated and treated glass on sensor is highly resistant to damage
- 100% Weatherproof
 - Rated -40F to 150F
- Impact Alarm – if lock is attacked and loses contact with the door, a screeching alarm will sound



**Don't forget the 2 Year
"Repair or Replace" Warranty**

Commercial-Grade Versatility

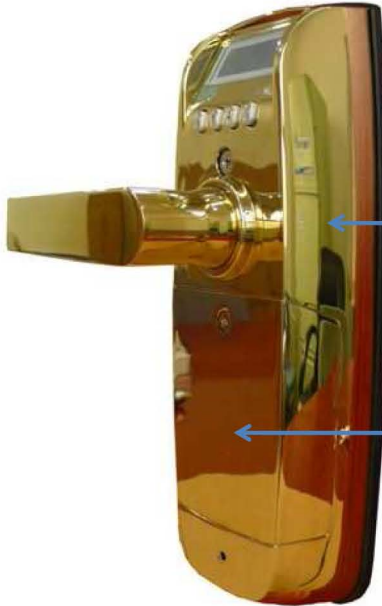

Inside Unit
(side view)

- 4 finishes
 - US26D – Satin Chrome
 - 90% of commercial installations
 - US15 – Satin Nickel
 - US3 – Polished Brass
 - US10B – Oil-Rubbed Bronze
- Non-handed Design
 - Installs as left or right-hand
- 4AA batteries
 - Li should last ~10,000 cycles
- Lock can also be hard-wired to run full-time on AC with a 12V DC power supply
 - Batteries will serve as back-up in case of power outage

Commercial-Grade Compliance

- Certifications
 - CE
 - FCC
 - ANSI (latch)
 - UL (latch)
- ADA-compliant handle
- HIPAA compliant AT records
- Ingress Protection IP-56 rated
 - 5 means dust tight
 - 6 means jetting water tight
- Multiple Patents



Commercial-Grade Access Features



LCD Panel Close-up
(inside unit)

- Program at the Lock
 - User Add
 - PIN, FP, User ID/PIN, User ID/FP
 - User Deletion
 - Individual and All
 - Access Control Features
 - Open Mode
 - Fingerprint Sensitivity Mode
 - Able to control fingerprint algorithm sensitivity per lock
 - Timed Access (Lock & Users)
 - Import/Export of Records

Commercial-Grade Audit Trail

- Audit Trail Upgrade (ATU)
 - Includes: Audit Trail software and 1GB Flash Drive
- How It Works
 - 1 flash drive supports all locks in a facility
 - Insert flash drive in bottom of inside unit USB port
 - Download AT records
 - Up to 20,000 records stored in each lock at any time before over-writing
 - MS Access-based AT software provides excellent tracking and is exportable to MS Excel



Audit Trail Screen Shot

BioAxxis - ThumbLock Management

System Lock User Record Maintain About

Bioaccess Control
Welcome, scan

Time 3/5/2009 8:46:10 PM

Manage
 Logout
 System Log
 Import Record
 Query and Print Record

System Info

Query and Print Record

Query Export Print Preview Close

Count: 93

Access Time	Lock ID	Lock Name	User ID	User Name	Operation
2009-02-16 13:48:26	99	Polished Brass	001	Sean	Unlock by Password
2009-02-16 13:48:58	99	Polished Brass	001	Sean	Unlock by PP
2009-02-16 13:50:06	99	Polished Brass	001	Sean	Unlock by Password
2009-02-16 13:50:19	99	Polished Brass	001	Sean	Unlock by PP
2009-02-16 13:52:28	99	Polished Brass	001	Sean	Unlock by Password
2009-02-16 14:00:11	99	Polished Brass	001	Sean	Unlock by Password
2009-02-16 14:03:37	99	Polished Brass	001	Sean	Login System Menu
2009-02-16 14:04:26	99	Polished Brass	001	Sean	Logout System Menu
2009-02-16 14:04:41	99	Polished Brass	006		Unlock by PP
2009-02-16 14:04:52	99	Polished Brass	001	Sean	Unlock by Password
2009-02-16 14:13:19	99	Polished Brass	001	Sean	Login System Menu
2009-02-16 14:14:00	99	Polished Brass	001	Sean	Logout System Menu
2009-02-16 14:14:17	99	Polished Brass	001	Sean	Unlock by Password
2009-02-16 14:41:30	99	Polished Brass	001	Sean	Login System Menu
2009-02-16 14:41:58	99	Polished Brass	001	Sean	Logout System Menu
2009-02-16 14:44:28	99	Polished Brass	001	Sean	Login System Menu
2009-02-16 14:45:01	99	Polished Brass	001	Sean	Logout System Menu
2009-02-16 18:26:40	99	Polished Brass	006		Unlock by PP
2009-02-16 18:27:06	99	Polished Brass	001	Sean	Unlock by PP
2009-02-16 18:27:18	99	Polished Brass	001	Sean	Login System Menu
2009-02-16 18:27:48	99	Polished Brass	001	Sean	Logout System Menu
2009-02-16 18:28:23	99	Polished Brass	001	Sean	Login System Menu
2009-02-16 18:28:45	99	Polished Brass	001	Sean	Logout System Menu
2009-02-16 18:30:58	99	Polished Brass	001	Sean	Login System Menu

Query Condition

Date
 from Thursday, February
 to Thursday, March

User Name
 like

Lock Name
 like

Operation
 = Unlock by PP

BioAxxis

start Microsoft PowerPoint BioAxxis - ThumbLock... 8:46 PM